




1 Log In

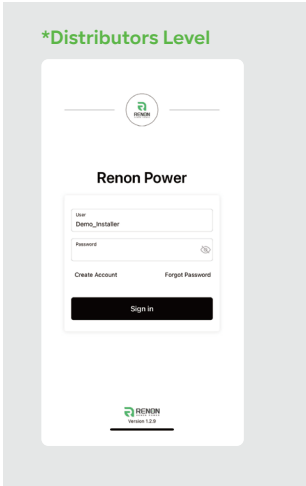

2 Create New User

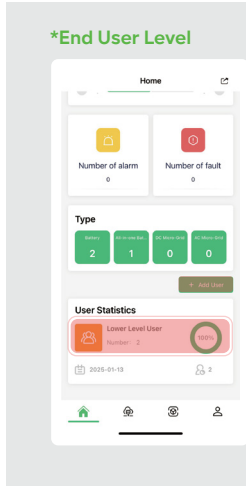


Method 1: Click "Add User"

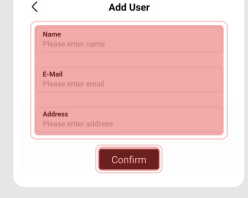

Fill in the end user's name, E-mail, and address. Click "Confirm" to create the sub-user account. The default password is 123456789.

01

Method 2: Click "Lower Level User"

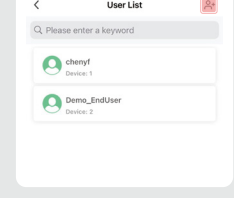


Step 1: Click the icon in the upper right corner.

Step 2: Follow the same steps as Method 1.


02

3 Delete User

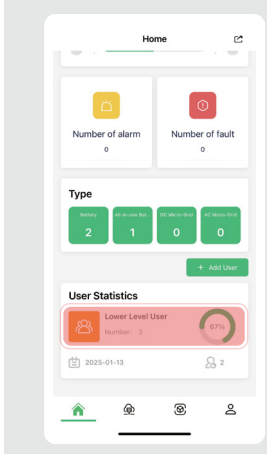



Step 1: Click "Lower Level User".

01

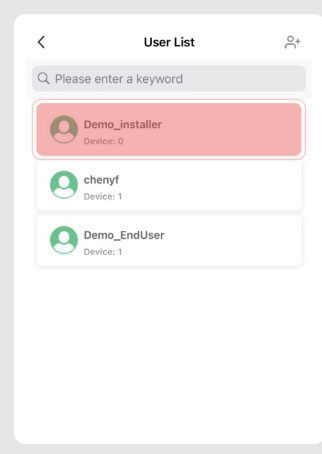

Step 2: In the "User List", swipe the user icon to the left and tap "Delete".

02

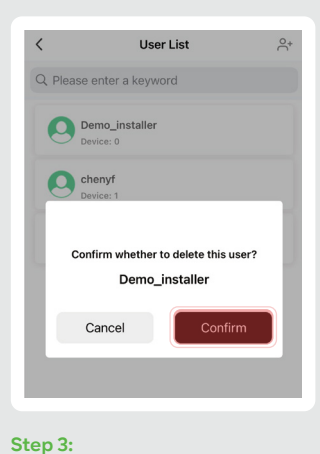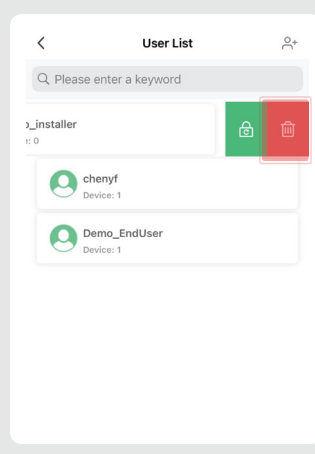


Step 3: Click "Confirm" to delete the selected user.

03


4 Distribution Device

Method 1: Use Distribution Page



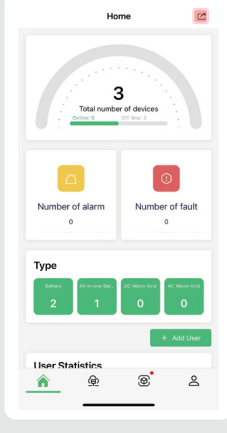


Step 1: Click on the icon in the upper right corner.

01

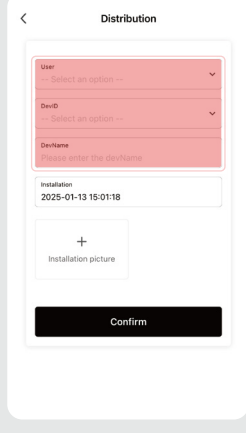


Step 2: Select the devices and users to be distributed.

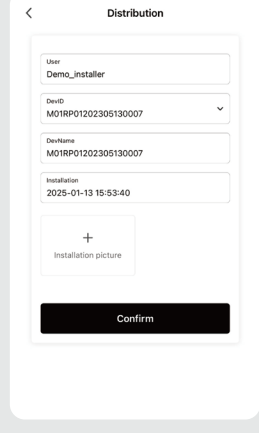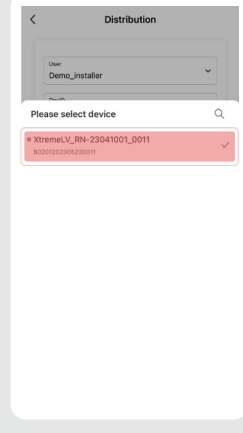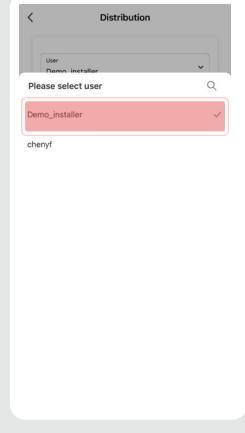

*If the device list is extensive, search by the device name.


02

Method 2: Assign from User List

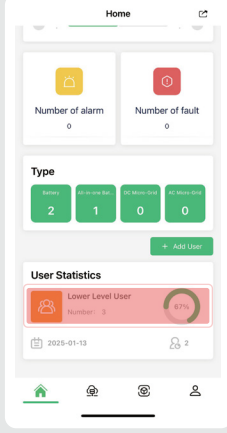


Step 1: Click "Lower level User".

01

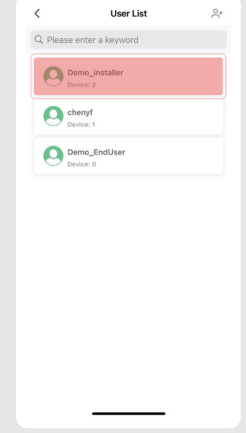


Step 2: Select the users who need to receive devices from the "User List".

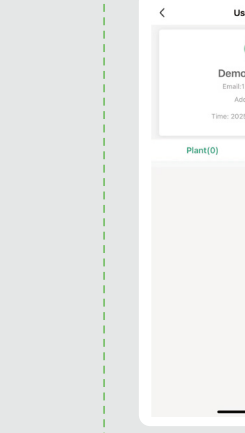

Step 3: Click the icon in the upper-right corner of the "User Info" page.

03

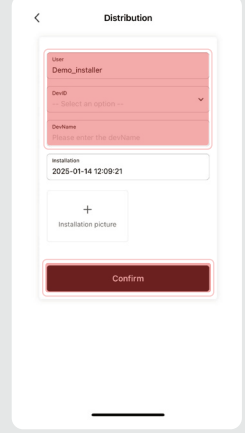


Step 4: Follow the same steps as Method 1, Step 2.

04

5 Create the End User's Plant and Distribute Devices


Create the End User's Plant

Note: Only accounts with End User level have the authority to create plants. Please log in with an End User account first.

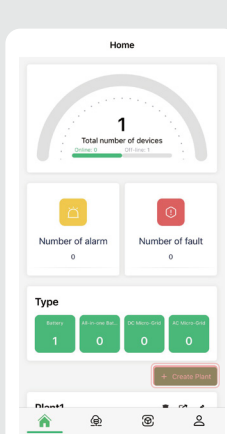

Step 1: Click the "Create Plant" icon.


01

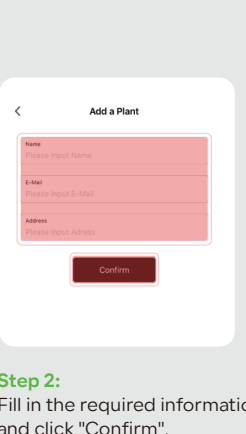


Step 2: Fill in the required information and click "Confirm".

01


Distribute Devices

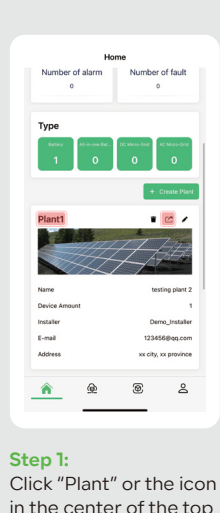

Step 1: Click "Plant" or the icon in the center of the top right corner to distribute the devices to the plant.

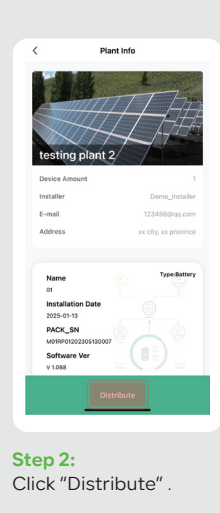


Step 2: Click "Distribute".

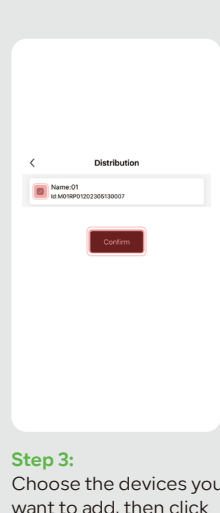

Step 3: Choose the devices you want to add, then click "Confirm".


02

6 Network Configuration

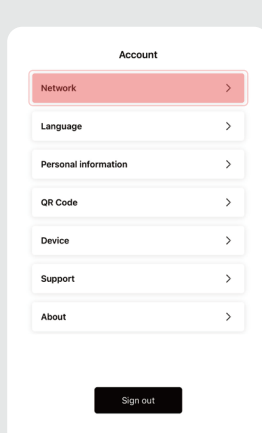


Step 1: Click "Network" to configure, and select Wi-Fi mode.

01

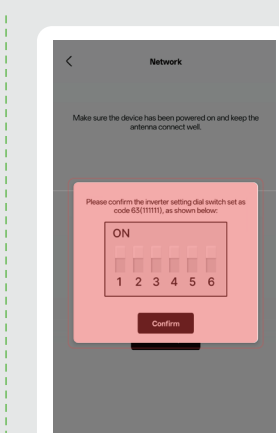

Step 2: Set the inverter dial to Code 63 (111111), as shown above.

02

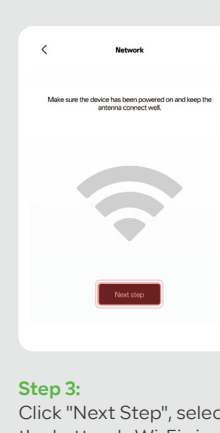

Step 3: Click "Next Step", select the battery's Wi-Fi signal, and enter the password "12345678" to connect.

03




Step 4: Return to the Renon Cloud Interface, then click "Connected, Next Step".




Step 5: Enter your Wi-Fi name (SSID) and Wi-Fi code (password).

04



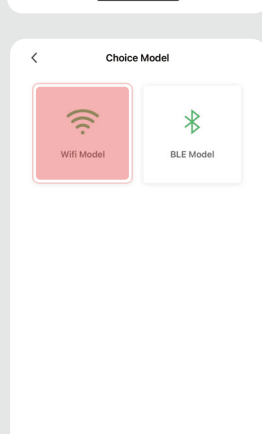


Step 6: Click "Confirm", then wait for the message "Command sent successfully" to appear.

04

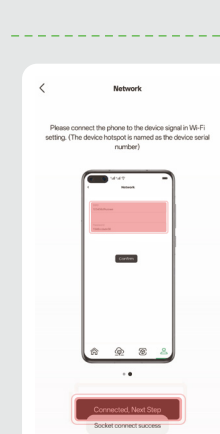

*Allow the battery some time to configure the network and connect to the cloud platform.

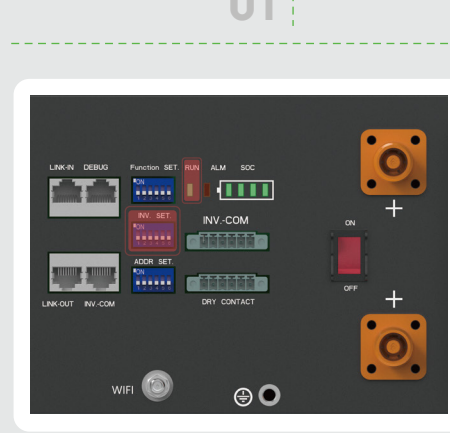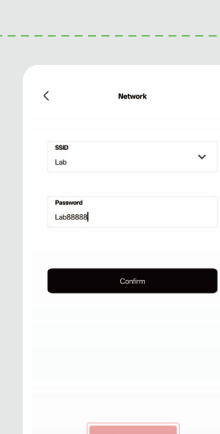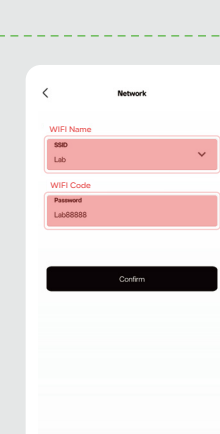

When the "RUN" light flashes slowly, it means the battery is connected to Wi-Fi and will automatically connect to the cloud platform. Once connected, set the inverter dial to match your inverter model.


The green LED indicates the Wi-Fi connection status:

LED Blinking Mode	Status
No Light	Battery is off.
Blinking	Connecting the sever properly with this WIFI.
Rapid Blinking	Unable to connect the sever with this WIFI.
Solid Green	Waiting for WIFI configuration.

Note: If the Wi-Fi signal is not found, use Bluetooth to search for the battery signal. In this step, you just need to enter the Wi-Fi account and password to complete the configuration.


05

7 Cancel Distribution

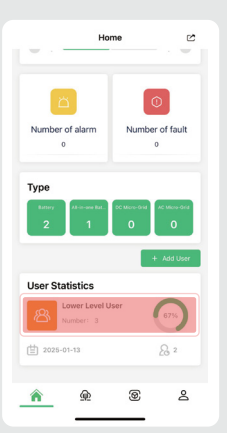


Step 1: Click "Lower level User".


01

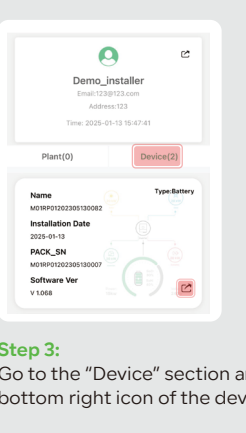


Step 3: Go to the "Device" section and click the bottom right icon of the device to cancel.

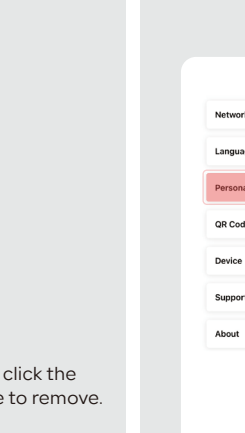

Step 4: Click "Confirm" to finalize the cancellation.

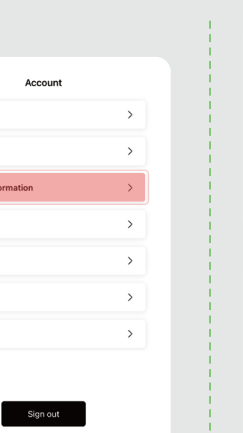


02

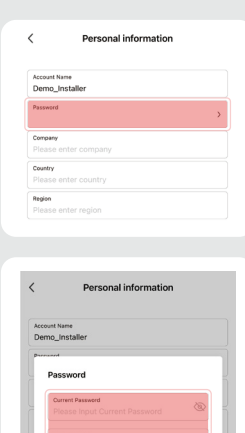


02

8 Reset Password

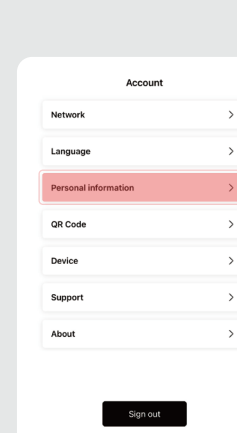

Step 1: Go to Account > Personal Information > Password and click to open the reset page.

01

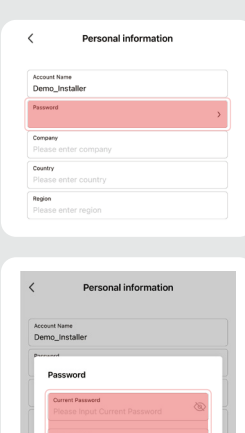

Step 2: Enter the current password and the new password, then click "Confirm" to save.

02